BRIDGE PRO

135 LITRE

REFIGERATED COFFEE TABLE WITH BLUETOOTH SPEAKER & WIRELESS CHARGING

High-tech coffee table with refrigeration



543327

When using electric appliances basic safety precaution should always be followed. Do not use BridgePro Refrigerated Coffee Machine with Bluetooth & Wireless Charger until you have read this manual thoroughly. Please keep this instruction manual in a safe place.

Visit BridgePro Online Store www.bgepro.com/shop/

UK CA CE

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS 4
GETTING TO KNOW YOUR SMART COFFEE TABLE 7
MAIN COMPONENTS 7
CONTROL PANEL 8
REFRIGERATED CONTROL PANEL 8
ACCESSING REFRIGERANT SETTINGS 9
LEFT DRAWER ADJUSTMENT 9
RIGHT DRAWER ADJUSTMENT 9
ECO MODE 9
DOOR ALARM 9
POWER OFF MEMORY 9
SPEAKER OPERATIONS 10
ACCESSING SPEAKER SETTINGS 10
USING ATMOSPHERIC LIGHT 10
MUSIC PLAY 10
MUTE MUSIC 10
VOLUME ADJUSTMENT 10
LIGHT OPTION 10
EQ SETTING 11
SPEAKER LOCK 11
SPEAKER OFF 11
CHARGING FUNCTIONS 12
WIRELESS CHARGING 12
USB-A OR TYPE C CHARGING 12
220V POWER 13
PREPARING FOR FIRST TIME USE 14
POWER SUPPLY WARNING 16
220V POWER SUPPLY, MOISTURE, & CLEANING SAFETY 16
GROUNDING WARNING 17
OPERATING ENVIRONMENT 17
FEATURES 19
WIRELESS CHARGER 19
SPEAKER 19
USB 19
REFRIGERATED DRAWERS 19

HIGH FREQUENCY COMPRESSORS 20
220V POWER SOCKET 20
CHARGERS 20
AUDIO CONNECTION WIRELESS 20
ATMOSPHERIC LIGHT 20
PARTITION STORAGE 20
REMOVABLE DOOR SEAL 20
SHELF STORAGE 21
TECHNICAL SPECIFICATION 21
CLEANING, STORAGE & MAINTENANCE 22
CLEANING THE FRIDGE DRAWERS 22
REMOVING THE DRAWERS FOR CLEANING 23
TRANSPORTING & STORING THE APPLIANCE 24
Transporting 24
Storage 24
ENVIRONMENTAL DISPOSAL & RECYCLING 25
TROUBLESHOOTING 26
WARRANTY 27
REGISTER WARRANTY 27
DISCOUNT ON FUTURE PURCHASES ..... **Error! Bookmark not defined.**
TERMS & CONDITIONS 28
NOTES 29

IMPORTANT SAFEGUARDS

Always follow basic safety precautions when using your Refrigerated Coffee Table.

READ ALL INSTRUCTIONS BEFORE USE FAILURE TO DO SO MAY RESULT IN DAMAGE TO THE UNIT, PERSONAL INJURY AND/OR PROPERTY DAMAGE.

YOU MUST LEAVE THE FRIDGE SITTING UPRIGHT POSITION FOR UP FOR A MINIMUM OF 2 HOURS PRIOR TO PLUGGING IN AND TURNING IT ON. DO NOT PLACE THE FRIDGE UPSIDE DOWN, ON EITHER END OR ANY SIDES.

- If the power cable is damaged, it must be replaced by a qualified technician.
- Children must be supervised and should not play with the appliance.
- This appliance is not intended for persons with reduced physical, sensory or mental capabilities unless supervised or instructed by someone responsible for their safety.
- Do not use the appliance outdoors or in unattended remote areas.
- Do not use the appliance for any purpose other than its intended use.
- Ensure the power supply can deliver at least **13A**.
- Check that the appliance's voltage rating matches your local mains supply before connecting.
- Unplug the appliance when not in use or before cleaning.
- Do not operate the appliance with a damaged cord, plug, or after it has been dropped.

- Do not immerse the cord, plug, or appliance components in water or liquids.
- Do not plug in or operate the control panel with wet hands.
- Do not cover air inlets, outlets, or sockets during operation.
- Keep the appliance at least **10 cm** away from walls or other surfaces; do not operate inside a wall cabinet.
- Do not place the appliance near hot gas or electric burners.
- Do not allow the cord to hang where it may become a trip hazard or be accessed by children or pets.
- Place the appliance on a stable, horizontal, heat-resistant surface.
- Do not rest heavy or sharp objects on the table surface to avoid scratches or damage.
- Do not store items inside the appliance other than manufacturer-approved accessories.
- Avoid placing the appliance on surfaces that are not heat- or wear-resistant.
- Keep ventilation openings clear and unobstructed.
- Do not use mechanical devices to accelerate defrosting unless recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments unless approved by the manufacturer.
- Do not store explosive substances (e.g., aerosol cans with flammable propellant) inside the appliance.
- Maintain proper clearance from curtains, draperies, or other flammable materials to prevent fire risk.

- Do not clean with metal scouring pads.
- Do not use acidic cleaning substances; they may damage internal surfaces.
- Care should be taken when near the appliance while it is operating.
- This device complies with Part 15 of the FCC Rules.
- Changes or modifications not expressly approved by the manufacturer will void the warranty.
- Maintain a minimum **20 cm** separation between the device's antenna and people during operation.
- If harmful interference occurs, try:
    - Reorienting or relocating the receiving antenna.
    - Increasing the distance between the equipment and receiver.
    - Connecting the equipment to a different circuit.
- Dispose of the appliance according to local regulations for flammable refrigerants and blowing gases.
- Remove the doors before scrapping the appliance to prevent children from becoming trapped.


FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS


NOTE

- The manufacturer or retailer is not responsible for any problems arising from incorrect use by the customer.

GETTING TO KNOW YOUR SMART COFFEE TABLE


MAIN COMPONENTS

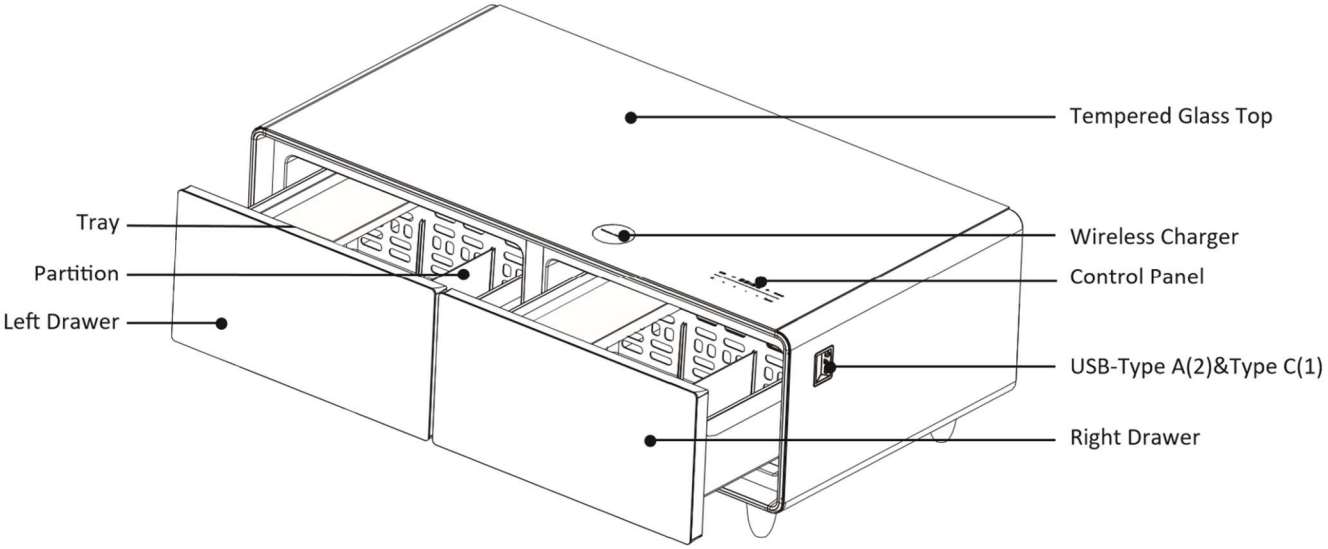

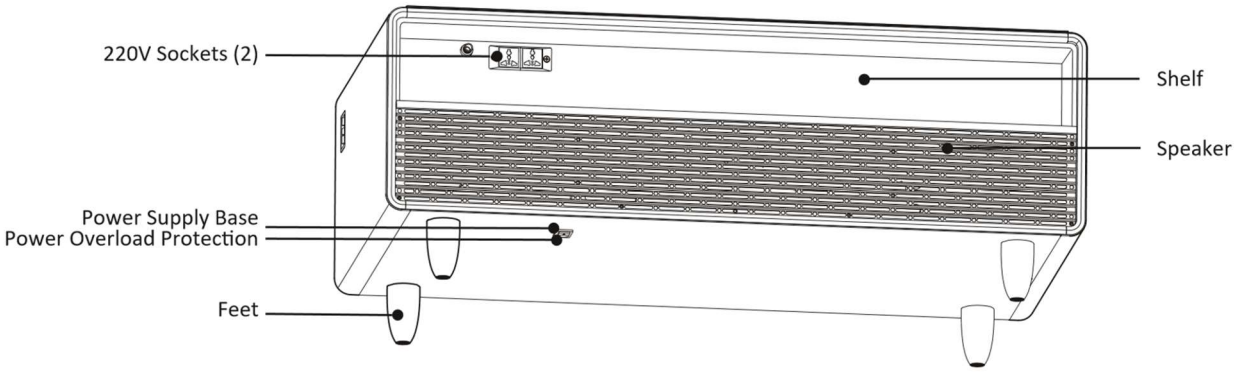

CONTROL PANEL


The Control Panel is divided into two sections, split by the horizonal line. The area above the line controls the refrigeration and the area below the line controls the speaker.

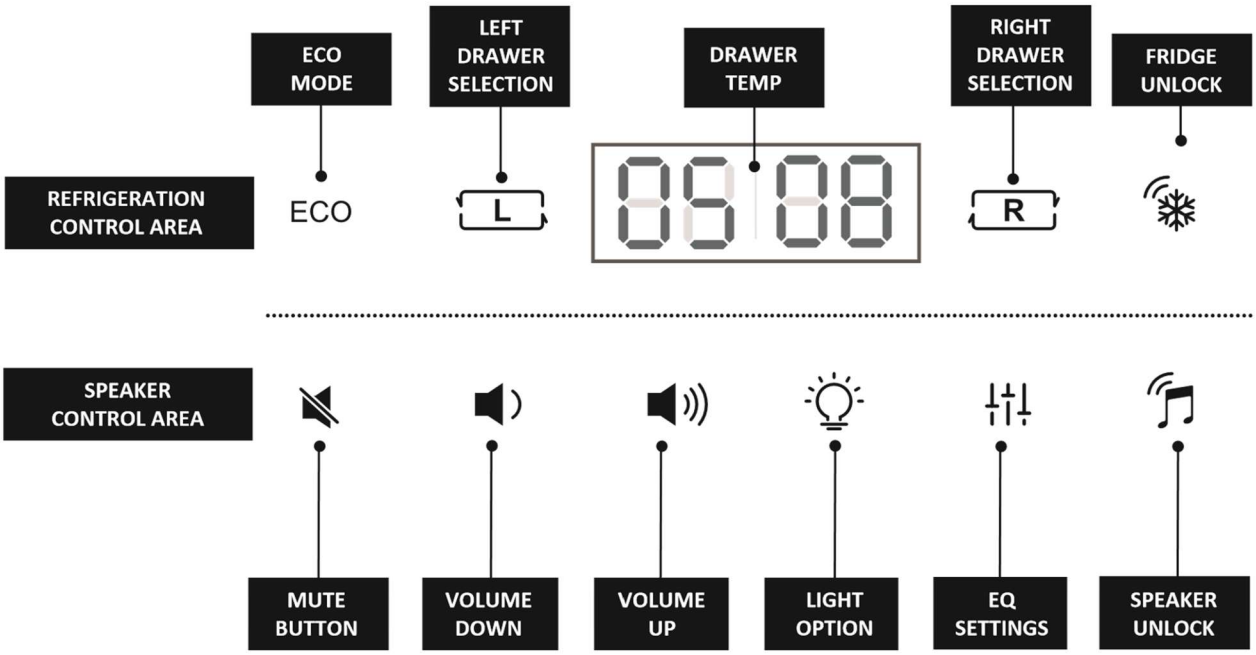

REFRIGERATED CONTROL PANEL

After the initial powering on of the appliance, it will automatically enter unlock mode. If there is no operation within 10s the control panel will automatically lock. When control panel is in lock mode, no information will be displayed.

NOTE: No buttons can be used in Locked Mode except the Unlock button.

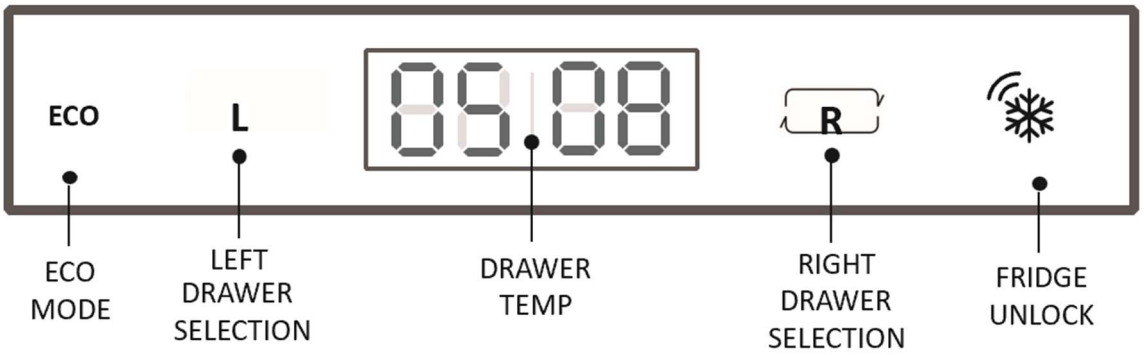

ACCESSING REFRIGERANT SETTINGS

Double tap on the appliance Unlock icon. Current drawer temperatures will appear on the display.

LEFT DRAWER ADJUSTMENT

Double tap on the appliance Unlock icon. After unlocking the control panel, tap on Left Drawer L icon. Tap on the Left Drawer icon to until preferred temperature is displayed.

RIGHT DRAWER ADJUSTMENT

Double tap on the appliance Unlock icon. After unlocking the control panel, tap on right Drawer R icon. Tap on the Right Drawer icon to until preferred temperature is displayed.

ECO MODE

Tap ECO icon. Display will show ECO. This will set both drawers to the most efficient power saving settings.

DOOR ALARM

When a drawer is opened, the temperature of the drawers will show in the display. If the drawer is left open, an alarm will beep to remind you to close the drawer.

POWER OFF MEMORY

When the appliance is powered off, the power setting will be memorized and revert back to last setting when powered back on.

SPEAKER OPERATIONS

ACCESSING SPEAKER SETTINGS

Double tap on the Speaker Unlock icon. Speaker will turn on and go into Bluetooth mode. On your device, go to Bluetooth settings and select device "T-bar". Speaker will announce when device has been paired. Once paired you can utilize the Speaker Control Panel.

USING ATMOSPHERIC LIGHT

Press icon to turn light on. To turn off, press icon again.

MUSIC PLAY

Double tap the Speaker Unlock icon to access the Control Panel.

MUTE MUSIC

Double tap the Speaker Unlock icon to access the Control Panel. Press the Mute icon. Note: the music will be muted but the song will continue.

VOLUME ADJUSTMENT


Double tap the Speaker Unlock icon to access the Control Panel. There are 16 levels of volume.

Tap the Volume Up icon to increase volume.

Tap the Volume Down icon to decrease volume.

LIGHT OPTION

Double tap the Speaker Unlock icon to access the Control Panel. Press the Light Option icon to turn light on. Press the Light Option again to turn light off.

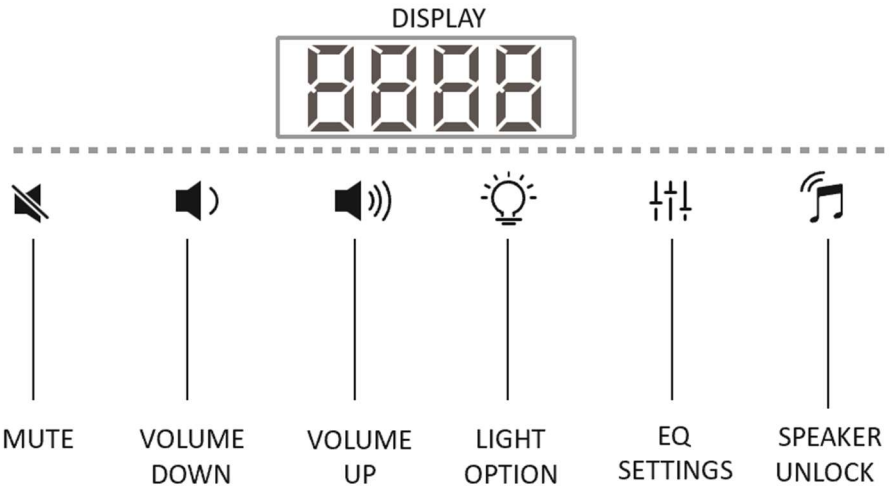

EQ SETTING

Double tap the Speaker Unlock icon to access the Control Panel. Tap the EQ Settings icon and continuing tapping until desired preset EQ option is displayed on the Display. Preset options include:
AUTO
FILM
JAZZ POP
ROCK

NOTE: lf you have the light option on, depending on which EQ setting you choose, the light effects will change.

SPEAKER LOCK

If there is no operation within 10 seconds, the Speaker Control Panel will automatically lock.

SPEAKER OFF


Double click the Speaker Unlock icon to access the Control Panel. Long press the Speaker Unlock icon until speaker turns off. Display panel will show OFF.

CHARGING FUNCTIONS

WIRELESS CHARGING

NOTE: Wireless charging works only with devices that support Qi-standard wireless charging.

- Wireless charging activates automatically once the table is plugged in.
- Place your device in the center of the wireless charging area for optimal performance.
- Ensure no metal objects or metal phone cases are between the charger and your device, as this may cause overheating.
- If the charging surface becomes overheated, remove your device immediately and stop charging.
- Do not use the wireless charger and the USB charger simultaneously; the USB charger will not function when wireless charging is active.

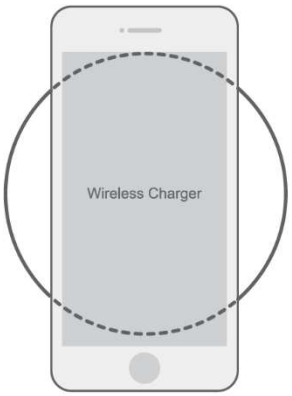



Voltage	12V Input
Output	15W (max)
Sensing Distance	=<4mm
Work Frequency	105 205KHz
Work Temperature	-10°C to 65°C
Work Humidity	10%RH 75%RH

USB-A OR TYPE C CHARGING

The table includes two USB-A ports that can charge compatible devices and connect them to the speaker.

It also includes one Type-C port that can charge compatible devices and connect them to the speaker.

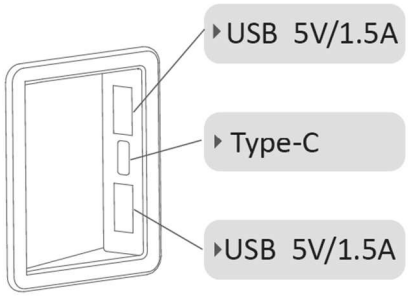

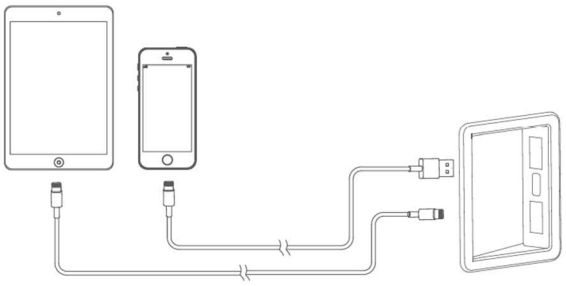

220V POWER

The table includes two 220V sockets designed to power external devices with a maximum current of 10A and a rated load of up to 1320W.

The sockets support standard three-pin electrical devices within this power rating.


WARNING:

Keep water away from the sockets. Do not allow liquids to spill into or accumulate around them.


Do not connect any appliance that exceeds 1320W rated power.

PREPARING FOR FIRST TIME USE

1. **Unpacking & Placement:** Carefully remove all packaging materials and place the appliance on a flat, stable surface. Remove the unit from the foam base before use. Using the appliance while it is still on the foam base may cause personal injury or property damage.

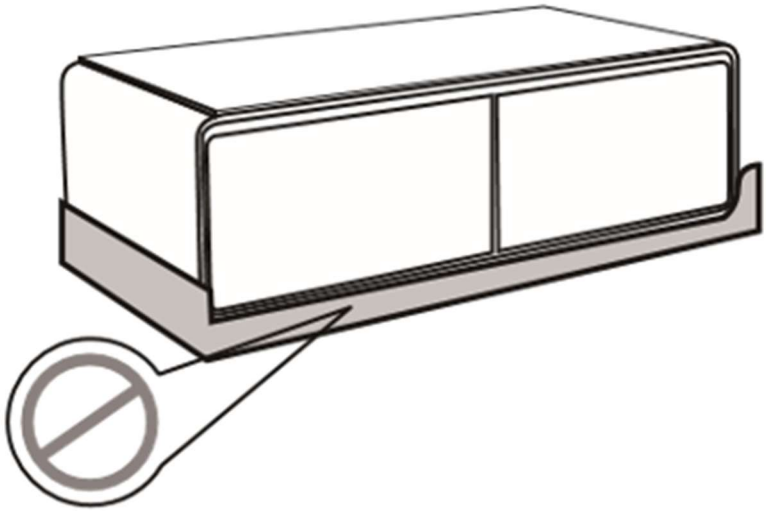

2. Peel off the transparent film from surface of the table. Ensure all accessories are included.

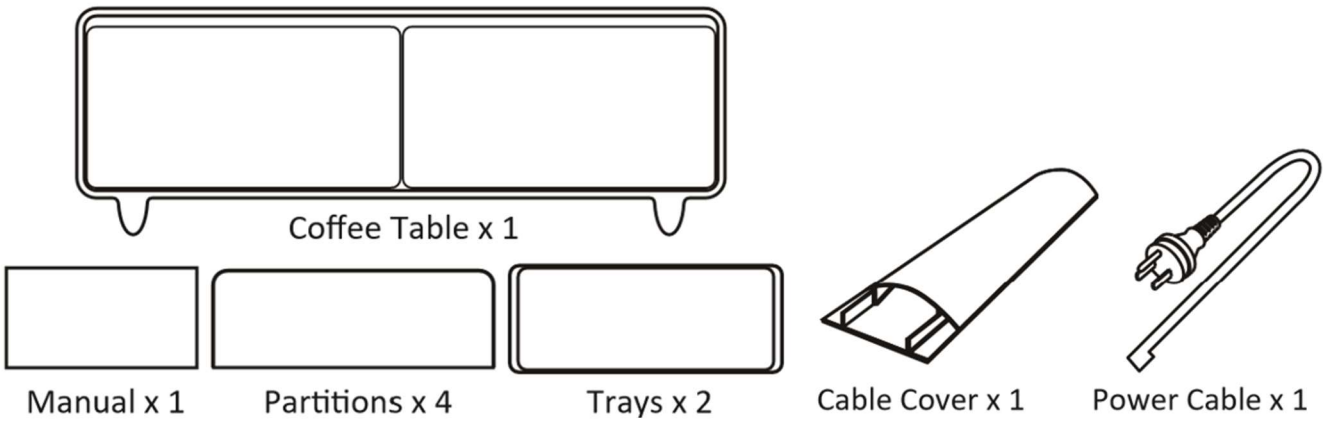

3. Place table where it will be positioned.

4. Place table so that there is more than 40cm on the front side (speaker side) and at least 50cm on the back side (furniture side).

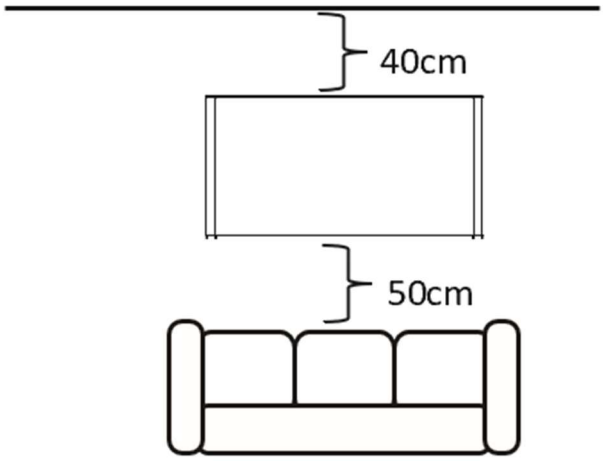


Table should be on flat, solid surface.

5. Clean the unit before using (refer to Maintenance Instructions).

6. Do not connect the power cord to power source. Let unit sit for 2 hours.

7. After 2 hours, it is ready to be plugged in and powered on.


POWER LIMIT & OVERLOAD PROTECTION

WARNING: The total power consumption of all external appliances connected to the 220V sockets must not exceed 1320W.

Do not use external multi-socket adapters or patch extensions with this unit.

WARNING: The appliance is equipped with an overload-protection system located at the bottom of the unit.

If the combined load exceeds 1320W, the power supply will automatically shut off to prevent damage.

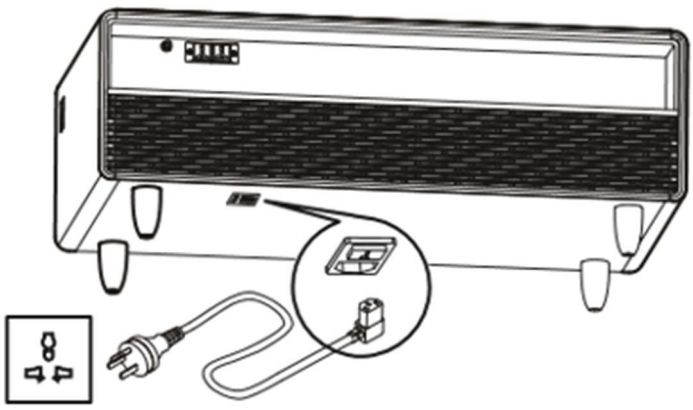

POWER SUPPLY WARNING

- Before powering on the unit for the first time, install the cable cover to protect the power cable from damage.
- Ensure the power cord is firmly and securely connected to the power source. A loose connection may cause fire, personal injury, or property damage.
- To prevent cable damage, do not step on the power cord.
- Do not roll over or drag the appliance across the power cord when moving the unit.
- When unplugging the appliance, pull the plug, not the cable.
- Always unplug the appliance before cleaning, repairing, or replacing any parts to avoid electric shock.
- If the power cable or plug is damaged, do not use the appliance.
- The appliance must be powered by AC 220V. Operating outside this voltage range may cause malfunction, property damage, or personal injury.

220V POWER SUPPLY, MOISTURE, & CLEANING SAFETY

- Keep all liquids away from the power socket.
- Do not use a wet cloth to clean the socket area.
- Water conducts electricity; contact with the socket may cause electric shock, personal injury, or property damage.
- Keep liquids away from the USB ports.
- Do not use a wet cloth to clean the USB ports.

GROUNDING WARNING

Use an independent, properly grounded power source for this appliance.

The power cable is equipped with a grounded plug and socket; do not remove, alter, or cut off the grounding (third) pin.

Proper grounding is essential to reduce the risk of electric shock and ensure safe operation.



WARNING

No repairs or modifications should be performed on this appliance. Attempting to alter, service, or modify the unit may result in property damage, personal injury, or death.



Appliances using R600a refrigerant must be serviced only by trained professionals. Improper handling can create a fire hazard during repair. Damaged units should be recycled. This appliance contains valuable materials that can be recovered or reused. Dispose of the appliance through your local civic waste management or collection facility, in accordance with regional regulations.

OPERATING ENVIRONMENT

- Place the appliance away from heat sources and out of direct sunlight.
- Position the appliance in a well-ventilated area with at least 16 inches (40 cm) of clearance on all sides.
- Do not place the appliance in damp locations or anywhere it may come into contact with water.
- Do not place power sockets, regulated power supplies, or small appliances on top of the unit.
- Avoid placing unstable objects on the appliance to prevent damage to the surface.
- Use caution when placing items containing liquids on the table. Spills may

cause electric shock, personal injury, or property damage.

- Do not store gas or any flammable materials in or near the appliance to prevent fire hazards.

- If gas or flammable vapors are detected near the appliance, immediately close the gas valve and ventilate the area by opening all doors and windows. **Do not touch or move the appliance until the area is fully cleared.**



WARNING

Do not use the appliance if it has been subjected to shock, impact, or any form of damage. Do not attempt to repair or modify the appliance. Any repair or alteration may result in fire, property damage, serious personal injury, or death.

FEATURES

WIRELESS CHARGER

- Thick, metal, or heavily-protected phone cases may reduce charging efficiency. Remove the case and try again if charging is slow or intermittent.

- The wireless charger may generate heat during use. If the device's battery overheats, charging may temporarily slow or pause until the temperature returns to a safe level.

- The wireless charger and USB charging cannot be used at the same time. When the wireless charger is active, USB charging is disabled; when USB charging is in use, wireless charging will not operate.

SPEAKER

- Keep the appliance away from equipment that is damp, hot, or produces strong magnetic or electrical currents.

- If any damage occurs, disconnect the appliance from the power supply immediately and remove the problematic items before powering it back on.

- Use only on a horizontal and stable surface with good ventilation.

USB

- Keep liquids away from USB ports. Do not use wet cloth to clean the ports.

REFRIGERATED DRAWERS

The appliance is designed with two refrigerated drawers that can be independently controlled for two zones of temperatures. Both drawers come with partitions and trays to organize all your favorite beverages and snacks.

NOTE:

- Only store fresh food in the drawers.
- Do not store foods that require colder environments.
- Do not put hot food into the appliance, as it will increase the

temperature inside the unit, affecting items.

- Do not open the drawers frequently or leave them open as it will also cause the temperature to rise.
- Make sure items are securely sealed to avoid excess moisture. This will help keep your appliance clean and free of odors.

HIGH FREQUENCY COMPRESSORS

The appliance is equipped with a high efficiency compressor to keep your unit working at optimum performance.

220V POWER SOCKET

The appliance is equipped with 220V power sockets, to supply power to other devices. The power sockets have a separate safety switch to detect high input or overload. If the safety switch detects either, it will cut off power.

CHARGERS

There are three types of chargers, one 15W wireless charger located on the top, two USB Type A chargers and one USB Type C charger which are located on the side.

AUDIO CONNECTION WIRELESS

The audio wireless connection has a transmission range of 33 feet. It can be easily connected to a phone, computer, laptop or TV.

ATMOSPHERIC LIGHT

Built-in atmosphere lighting provides rich color and ambience.

PARTITION STORAGE

In order to more effectively utilize the storage space, there are two partitions and one tray in each drawer allowing for more flexible use.

REMOVABLE DOOR SEAL

The door seal ensures long lasting use of the refrigerated drawers. It is removable so it can be easily cleaned to help reduce energy consumption.

SHELF STORAGE

Designed with shelf storage to place small items to help personalize your space.

TECHNICAL SPECIFICATION

Consumption	0.38kWh/24h	**Temp. Controlling**	Electric controlling
Noise	36 dB	**Cooling Type**	Compressor
Voltage	220V-240V 50/60Hz	**Refrigerant/Wt**	R600a /25g
Net Weight	55kg	**Volume**	70L+65L
Wireless charging	15W	**Refrigerator Temp**	3C° ~ 8C°
Size	1295*705*460mm	**Refrigerator Temp**	6C°~ 12C°
Speaker	20W*2	**USB/Type-C**	5V/1.5A

CLEANING, STORAGE & MAINTENANCE

PROHIBITED STORAGE
The appliance must not be used to store blood, biological materials, or any other medical or laboratory products.

Do not store flammable, explosive, hazardous, or dangerous substances in the appliance, including chemicals of any kind.

CLEANING THE FRIDGE DRAWERS

Clean drawers regularly. Do not leave old food stored in drawers.

1. Unplug the appliance prior to cleaning.

2. Do not disassemble the unit with force, as it may cause damage.

3. Clean the unit with a soft, damp cloth. Dry unit with soft cloth. Do not use too much liquid as it may cause deformation, and or short circuit the unit. No free-flowing liquid should be used.

4. Clean drawers with soft, damp cloth and mild detergent. Dry with soft cloth.

5. Inspect the unit after cleaning. Do not use if any damage is found.

6. Make sure unit is completely dry before plugging back in.

NOTE: Be sure to clean the door seal thoroughly to ensure a long-lasting good seal and preserve power consumption.

The appliance is heavy. Protect floor when cleaning the unit.

When moving the fridge, do not shake it.

Do not use hot water to clean glass top or any other part of the appliance, including the drawers, trays and partitions.

REMOVING THE DRAWERS FOR CLEANING

1. Before removing the drawers take the trays and partitions out.


2. Pull drawer as far as it will go, then lift and pull gently.

3. Clean drawers, trays and partitions can be washed.

4. Clean door seals.


5. Dry all parts before placing the drawers back into the unit



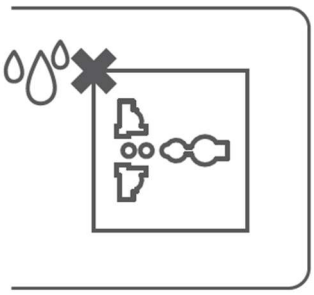

WARNING:
Do not spray water onto or into the unit.
Dry completely before connecting to power source.
Do not use the following substances:

- Acidic or alkaline solutions or powders
- Benzene, sodium bicarbonate, alcohol, carious acids or
- petroleum
- Abrasive cleaners
- Abrasive sponges or hard brushes
- Hot water

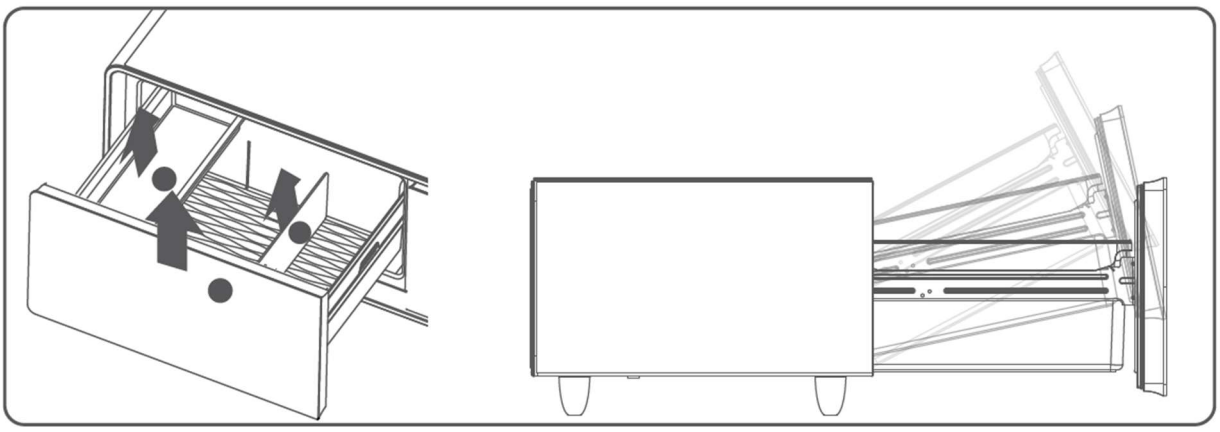

TRANSPORTING & STORING THE APPLIANCE

Transporting

- Unplug the appliance before transporting it.
- Secure all trays, partitions, and internal components.
- Do not tilt or stand the appliance upright.
- The maximum incline must be less than 45°. Tilting beyond this angle may damage the refrigeration system.



- Refrigerated drawers will remain cool for 1–2 hours without power. After power is disconnected, do not open the drawers to preserve internal temperature.
- Any power interruption may cause temperatures to rise, reducing food quality and shortening food lifespan.
- If the appliance has been without power for an extended period, unplug it and clean thoroughly.
- If leaving home for an extended period, power off the appliance and remove all perishable items.

Storage

- Ensure the appliance and all accessories are clean and completely dry before storage.
- Ensure the door is fully closed.
- Store the appliance horizontally, resting on its supporting legs.
- Do not store the appliance in damp, wet, or excessively hot environments.

ENVIRONMENTAL DISPOSAL & RECYCLING

Your appliance has been designed for long-term use. When it eventually reaches the end of its service life, please consider how you can help protect the environment.



This symbol indicates that the appliance must not be disposed of with regular household waste within the UK or EU. To prevent environmental harm or risks to human health from uncontrolled disposal, the appliance should be recycled responsibly to support the sustainable recovery of valuable materials.

Your appliance contains components that can be reclaimed or recycled. Please take it to your local civic waste collection point for proper processing in accordance with regional regulations.

TROUBLESHOOTING

Fault	Causes	Solution
Power light is on; compressor is working but making "humming" sound.	Power Voltage is lower than 187V.	Stop powering on the refrigerator and wait the voltage to get back to normal.
Compressor starts but stops after about one minute, and then starts and stops ongoing.	Power voltage is higher than 242V	
Compressor runs for a long time, but evaporator surface is frost free.	Leak	Unblock via a qualified technician.
	Blockage	
There is frost on the surface but the compressor is keep working.	Too much frost on evaporator.	Defrost.
	Opening the drawers for a long time.	Do not open drawers frequently.
	Drawers are filled with too many items.	Remove some of the items inside.
	Bad heat dissipation of condenser	Move to a ventilated area.
	Thermostat is failing or sensor is missing.	Engage a qualified technician.
The refrigerator doesn't work and isn’t refrigerated.	Fuse is blown and the power light is off.	Replace fuse.
	Input controlling circuit has fault and the power light is off.	Engage a qualified technician.
Excessive noise	Machine placement is uneven.	Adjust the feet of the refrigerator.
	Inner fastener is loose.	Secure the fastener.
	Collision between pipes.	Separate the pipes.
The appliance refrigerates normally, but when touching the surface there is a slight tingling sensation, and an electroprobe test shows a faint light.	Induced electricity is present due to improper or incomplete grounding.	Verify that the earthing (ground) conductor is correctly connected and functioning. Restore proper grounding before continuing to use the appliance.

WARRANTY

TERMS & CONDITIONS

BridgePro Management Ltd ("BPM").

Limited Warranty: This product is guaranteed for 12 months from the date of original purchase. This guarantee is valid in the UK only.
If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase or a receipt.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- The product has limited liability for incidental or consequential loss or damage.

To validate your warranty, please visit www.bgepro.com/support/warranty/ and register with us online. Warranty is only valid with proof of purchase or receipt.

This product warranty is available to consumers only.
You are a consumer if you purchased the product at retail for personal, family, or household use. Except as otherwise stated under applicable law, this warranty is not available to retailers or other commercial purchasers and owners.
This product warranty is void if the product is used for situations other than a single-family household use or subjected to any voltage and wave forms other than as specified in this instruction manual (e.g. 220V-50Hz).

Transportation charges: Transportation charges for products under this warranty, subject to repair or replacement, shall be borne by the purchaser.

Conditions: Service centers or retail stores do not have the right to alter, modify, or in any way change the terms and conditions of this warranty.
Warranty registration is not necessary but is encouraged to validate product warranty.

About your warranty: Most warranty repairs or replacements are handled routinely but sometimes requests for warranty services may not be appropriate, e.g. warranty services would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, 3rd party warehousing, or improper installation. Similarly, warranty is void if the serial number on the product has been removed or the product has been altered or modified.

Normal wear: This warranty does not cover normal wear of any parts or damage resulting from any of the following negligent use or misuse of the product:

- Improper voltage or current,
- Use contrary to the operation instructions,
- Deviation from the instructions regarding storage and transportation, or
- Repair or alteration by any 3rd party.

This warranty does not cover Acts of God such as fire, flood, hurricanes, and tornados.
BPM shall not be liable for any incidental or consequential damages by the breach of any express or implied warranty.
Except to the extent prohibited by applicable law any implied warranty of merchantability or fitness for the particular purpose is limited in duration of this warranty.

NOTES