
BRIDGE PRO

2 Litre

MULTIFUNCTION RICE COOKER & STEAMER

Portable Electric Rice Cooker

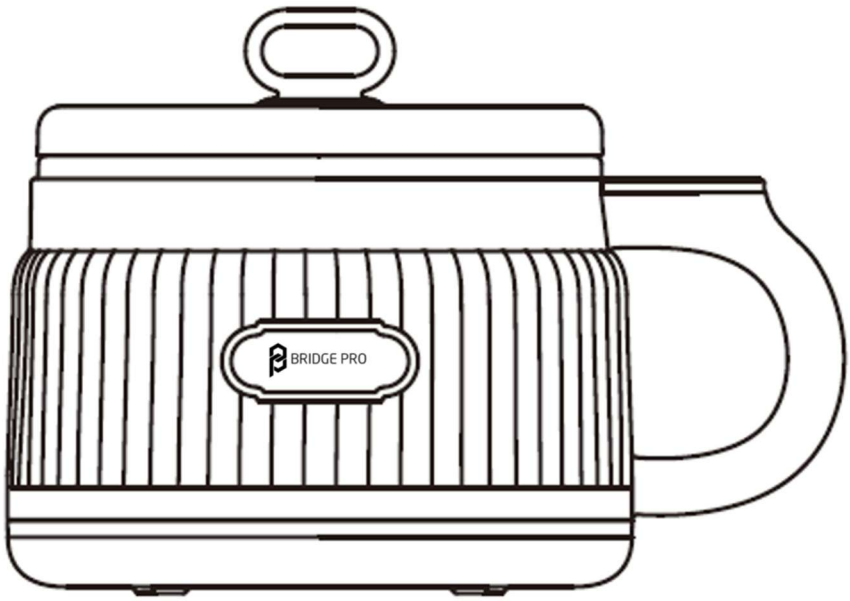

543325

220V~, 600W

When using electric appliances basic safety precaution should always be followed. Do not use BridgePro Multifunction Rice Cooker & Steamer until you have read this manual thoroughly. Please keep this instruction manual in a safe place.

Visit BridgePro Online Store **www.bgepro.com/shop/**

UK CA CE

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS 3
PARTS IDENTIFICATION 6
USING YOUR MULTIFUNCTION RICE COOKER 7
- FUNCTIONS DESCRIPTION 7
- BEFORE FIRST USE 7
- BASIC OPERATION 7
- FUNCTIONS DESCRIPTION 8

CLEANING & MAINTENANCE 9
- DESCALING THE INNER POT 9
- STORAGE 9
- ENVIROMENTAL PROTECTION 10

TROUBLE SHOOTING 11
TECHNICAL SPECIFICATION 11
TERMS & CONDITIONS 12
DECLARATION OF CONFORMITY 13
NOTES 14

IMPORTANT SAFEGUARDS

Please read these instructions carefully before use!

This product is intended for use at home or in similar locations only.

READ ALL INSTRUCTIONS BEFORE USE: SAFETY INSTRUCTIONS

Warning: Please be alert to the risk of personal danger, injury, and property damage.

Thank you for purchasing this appliance. To avoid potential harm or property damage, please pay attention to the following safety precautions. If the machine or power cord is damaged; it must be replaced or be repaired by a qualified technician to prevent danger.

To ensure safe operation, always follow these precautions:

1. This appliance shall not be used by children. Keep the appliance and its accessories out of reach of children.

2. This machine should not be used by individuals with physical, sensory, or mental disabilities, or by those lacking relevant experience and skills (including children), unless they receive guidance or instructions on the product's use from a responsible person ensuring safety.

3. Children shall not play with the appliance. Children must not clean or operate the appliance unsupervised.

4. Place the cooker on a stable, heat-resistant surface away from children.

5. Confirm that your household voltage matches the rating on the appliance before plugging in.

6. Do not allow the power cord to hang over table edges or touch hot surfaces.

7. Do not place the cooker on or near hot gas stoves, electric burners, or inside heated ovens.

8. Never operate the cooker empty (without water). Dry-burning may damage the

heating element.

9. If water becomes too low during cooking, unplug immediately, allow to cool, then refill.

10. Do not immerse the appliance, power cord, or plug in water or any liquid.

11. Be cautious of steam escaping from the lid vent during operation.

12. Use gloves when handling hot parts. Open the lid carefully to avoid steam burns.

13. Do not touch the hot lid, pot body, or heating plate during or immediately after cooking.

14. Avoid moving the appliance while it is operating.

15. Use only manufacturer-approved accessories.

16. Unplug the cooker when not in use and before cleaning.

17. Do not exceed the maximum water level to prevent overflow.

18. The appliance must not be controlled by external timers or remote systems.

19. Ensure the machine is disconnected from the power supply before installation,
maintenance, or transportation.

20. Do not touch the power plug with wet hands to avoid electric shock.

21. If the machine or power cord is damaged, it must be replaced or repaired by a qualified technician to prevent danger.

22. Do not damage the power cord or plug. Do not bind the power cord while using the machine. Using damaged power cord may result in electric shock, short circuits, or fire hazards.

23. Do not modify, excessively twist, pull, or place heavy objects on the power cord or plug.

24. Hold the plug when unplugging, not the cord, to avoid short circuits or damage the cord, leading to fire or electric shock hazards.

25. If the plug or power cord is damaged or the plug is not fully inserted into the socket, it may cause electric shock, overheating, or even a fire hazard.

26. If the power cord or plug becomes unusually hot, immediately turn off the machine and consult a qualified technician to prevent danger.

27. If the machine emits a burnt smell, makes unusual sounds or vibrations, or exhibits any other abnormal phenomena or malfunctions, immediately turn off the machine and consult a qualified technician.

28. Do not disassemble or modify the machine without authorization, as this may result in electric shock, malfunction, or fire hazards.

29. Do not use solvents such as benzene or thinners, or any acidic substances whatsoever to clean this machine, and avoid contact with insecticide sprays.

30. Maintain at least 10 cm of space around the front, back, and sides, and 30 cm above the product.

31. Do not place objects on top of the product.


32. Place the machine on a stable, flat surface.

33. Unplug the power when not in use for a long time to avoid insulation deterioration, fire, electric shock, or short circuits.

34. This appliance is intended for household use only; any other (industrial or commercial) use is not permitted.

35. For safe operation, assemble and use the appliance only according to the instructions in the manual.

PARTS IDENTIFICATION

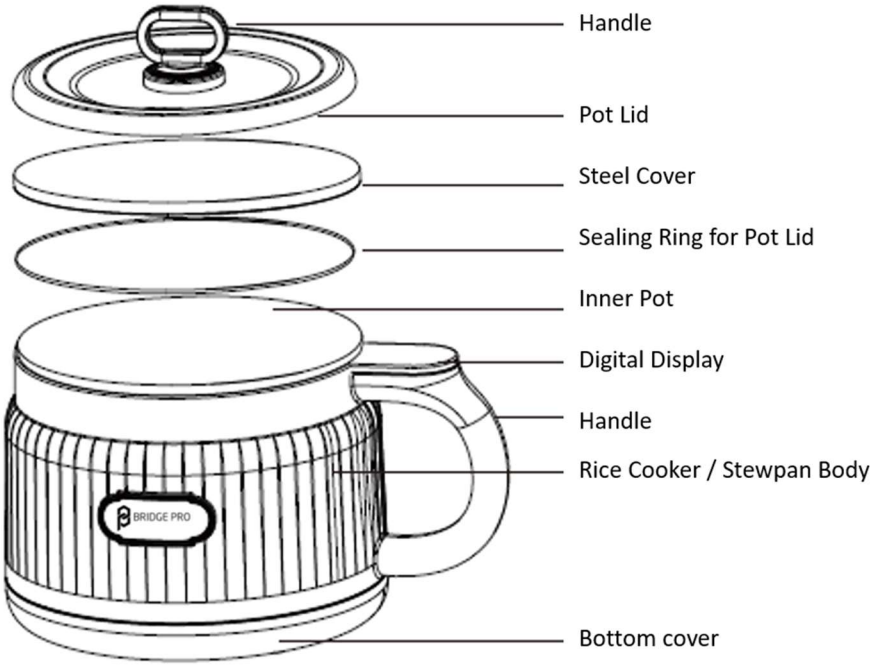



- Steamer
- Instruction manual
- Power cable
- Power input cover

Package Content

This appliance includes:

- Main Stewpan Body – with control panel, handle, and non-slip base
- Inner Pot – stainless steel with non-stick coating
- Pot Lid Assembly made from:
  - Food-grade PP outer lid
  - SUS304 stainless-steel inner cover
  - Silicone sealing ring
- Power Cable Assembly
- Measuring Cup (food-grade PP)
- Certificate of Conformity & User Manual

All materials comply with GB4806 food-contact standards.

USING YOUR MULTIFUNCTION RICE COOKER

Instructions for using the electric rice cooker.


FUNCTIONS DESCRIPTION

BEFORE FIRST USE

1. Wash the lid and inner pot with warm water and mild detergent.
2. Wipe the main body with a dry cloth - do not immerse.
3. Ensure all parts are completely dry before assembly.

BASIC OPERATION

1. Place the cooker on a flat, stable surface.
2. Add ingredients and water according to the recipe.
3. Ensure the water level is between the minimum and maximum marks.
4. Close the lid securely.
5. Connect the power cord to the cooker and then to the mains.
6. Press the Power button (display shows “OFF”).

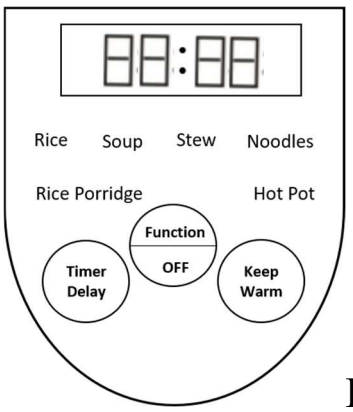

Digital display / panel

7. Select a cooking function using Function.
8. The indicator flashes 5 times, then cooking begins.
9. When cooking ends, the buzzer sounds 3 times and the cooker enters a 2-hour keep-warm mode at 60°C.
10. Open the lid carefully and serve.

Timer / Delay

1. Press Timer/Delay to set a delay from 3 minutes to 24 hours.
2. After setting the time, select a cooking function.
3. Countdown begins automatically after 3 seconds.

Keep Warm

1. Press Keep Warm to activate keep-warm mode (default 60°C).
2. Temperature can be adjusted between 45°C–90°C.

FUNCTIONS DESCRIPTION

Function	Default Time	Notes
Rice Cooking	40 min	Do not exceed 400g rice (approx. 4 cups).
Soup	1 hr 30 min	Ensure ingredients + water do not exceed max level.
Stew	45 min	Suitable for slow-cooked dishes. Ensure ingredients + water do not exceed max level.
Noodles	25 min	Do not cover the lid during noodle cooking to prevent overflow. Ensure ingredients + water do not exceed max level.
Rice Porridge	60 min	Maintain correct water level to avoid boiling over.
Hot Pot	2 hrs	Ideal for shared table cooking. Ensure ingredients + water do not exceed max level.

General Cooking Notes:

- Food pieces should be similar in size for even cooking.
- Cooking time may vary dependent on ingredients and application.
- Menu times are reference values and may vary with ingredient size, freshness, and preference.

CLEANING & MAINTENANCE

1. Unplug the cooker and allow it to cool completely.
2. Do not immerse the main body, power cord, or plug in water.
3. Wash the lid in warm water with mild detergent.
4. Clean the inner pot with warm water; avoid metal brushes or abrasive cleaners.
5. Wipe the exterior with a soft, damp cloth.
6. Dry all parts thoroughly before storage.
7. Do not wash the cooker in a dishwasher.
8. Use soft cleaning tools to avoid damaging the non-stick coating.

DESCALING THE INNER POT

Scale buildup is normal and depends on water hardness.

To remove limescale:

1. Add 10g lemon detergent + 200g water to the pot.
2. Plug in the cooker.
3. Select Stew mode and heat for 10 minutes.
4. Unplug and let stand for 30 minutes.
5. Pour out the solution and rinse several times with clean water.
6. Repeat if necessary.

STORAGE

- Ensure the cooker is completely dry before storing.
- Store in a cool, dry place away from moisture and direct sunlight.
- Keep out of reach of children.
- We recommend storing the device in its original packaging!
- Store the appliance in a well-ventilated, dry place out of the reach of children.
- For long term storage, ensure the product is clean before storing away.
- Store in a dry and ventilated space to prevent moisture build up within the electrical components.

ENVIROMENTAL PROTECTION

Correct disposal of this product:

Your appliance has been designed to run for many years. However, when you decide to replace it, remember to think about how you can contribute to protecting the environment.



This marking indicates that your appliance should not be disposed of with other household wastes throughout the UK or the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle this appliance responsibly to promote the sustainable reuse of material resources. Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

TROUBLE SHOOTING

Issues	Possible Causes	Possible Solutions
Cooker does not start	Not plugged in / damaged cord	Check connection; contact service if damaged.
Food overflows	Exceeded max water level	Reduce ingredients or water.
Dry-burn protection activates	Too little water	Allow to cool, then refill.
Unusual smell	New appliance or residue	Clean inner pot and lid thoroughly.
Limescale buildup	Hard water	Perform descaling procedure.

TECHNICAL SPECIFICATION

PRODUCT SPECIFICATION	
Product Name:	Multi-Function Rice Cooker
Model	543325
Rated voltage	220V~
Rated power	600 W
Rated Frequency	50 Hz
Standards	GB 4706.1-2005, GB4806 food-contact standards
Dimension	245 x 245 x 270 mm
Weight	1.3 kg NW
Materials	Lid/Shell/Measuring Cup: PP Steel Cover: SUS304 Stainless Steel Inner Pot: Stainless Steel (12Cr13) + Non-stick coating Sealing Ring: Food-grade Silicone

TERMS & CONDITIONS

BridgePro Management Ltd ("BPM").

Limited Warranty: This product is guaranteed for 12 months from the date of original purchase. This guarantee is valid in the UK only.
If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase or a receipt.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse, or consumable parts.
- The product has limited liability for incidental or consequential loss or damage.

To validate your warranty, please visit www.bgepro.com/support/warranty/ and register with us online. Warranty is only valid with proof of purchase or receipt.

This product warranty is available to consumers only.
You are a consumer if you purchased the product at retail for personal, family, or household use. Except as otherwise stated under applicable law, this warranty is not available to retailers or other commercial purchasers and owners.
This product warranty is void if the product is used for situations other than a single-family household use or subjected to any voltage and wave forms other than as specified in this instruction manual (e.g. 220V-50Hz).

Transportation charges: Transportation charges for products under this warranty, subject to repair or replacement, shall be borne by the purchaser.

Conditions: Service centers or retail stores do not have the right to alter, modify, or in any way change the terms and conditions of this warranty.
Warranty registration is not necessary but is encouraged to validate product warranty.

About your warranty: Most warranty repairs or replacements are handled routinely but sometimes requests for warranty services may not be appropriate, e.g. warranty services would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, 3rd party warehousing, or improper installation. Similarly, warranty is void if the serial number on the product has been removed or the product has been altered or modified.

Normal wear: This warranty does not cover normal wear of any parts or damage resulting from any of the following negligent use or misuse of the product:

- Improper voltage or current,
- Use contrary to the operation instructions,
- Deviation from the instructions regarding storage and transportation, or
- Repair or alteration by any 3rd party.

This warranty does not cover Acts of God such as fire, flood, hurricanes, and tornados.
BPM shall not be liable for any incidental or consequential damages by the breach of any express or implied warranty.
Except to the extent prohibited by applicable law any implied warranty of merchantability or fitness for the particular purpose is limited in duration of this warranty.

DECLARATION OF CONFORMITY

Manf: BRIDGEPRO MANAGEMENT LTD, 167–169 Great Portland Street, London, W1W 5PF

EU Rep: Authorised Rep Compliance Ltd., Ground Floor, 71 Lower Baggot Street, Dublin, D02 P593, Ireland. www.arccompliance.com

This declaration of conformity is issued under the sole responsibility of the manufacturer BridgePro Management Ltd.

Product Name	Product Type	Product Part Number
BridgePro Multi-Function Rice Cooker	Rice Cooker	543325 (MC-12D)

Note: Serial number is stated on each product rating label.

The object of the declaration as described above is in conformity with the relevant Union harmonisation legislation:


Legislation	Title
2006/42/EC	Machinery Directive
2014/35/EU	Low Voltage Directive (LVD)
2014/30/EU	EMC Directive
2011/65/EU	RoHs Directive

For the evaluation of compliance, the following standards have been applied:

Safety	EN 60335-2-15:2016+A11:2018+A1:2021+A2:2021+A12:2021 EN 60335-1:2012+A11:2014+A13:2017+A1:2019+A14:2019+A2:2019+A15:2021+A16:2023 EN 62233:2008	RoHs	ROHS Directive (EU) 2015/863 2011/65/EU
LVD / EMC	EN IEC 55014-1:2021 EN IEC 55014-2:2021 EN IEC 61000-3-2:2019+A1:2021+A2:2024 EN 61000-3-3:2013+A1:2019+A2:2021		

I hereby declare that the equipment named above has been designed to comply with the relevant sections of the above referenced standards. The unit complies with all relevant essential requirements of the Union harmonisation legislation.

Signed for an on behalf of BridgePro Management Ltd.

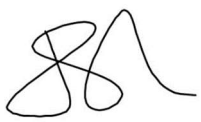

Director

London, England, 15/05/2025

NOTES