BRIDGE PRO

750ml DIGITAL

PORTABLE SMOOTHIE MAKER

Wireless On-The-Go Twin Steel Blades Portable Blender Smoothie Maker



543321

7.4V DC, 180W

When using electric appliances basic safety precaution should always be followed. Do not use BridgePro Portable Smoothie Maker until you have read this manual thoroughly. Please keep this instruction manual in a safe place.

Visit BridgePro Online Store www.bgepro.com/shop/

UK CA CE

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS 3
PARTS IDENTIFICATION 6
USING YOUR BLENDER 7
CLEANING & MAINTENANCE 9
TECHNICAL SPECIFICATION 11
FAULT RESOLUTION 11
TERMS & CONDITIONS 12
DECLARATION OF CONFORMITY 13
NOTES 14

IMPORTANT SAFEGUARDS

Please read these instructions carefully before use!

This product is intended for use at home or in similar locations only.

READ ALL INSTRUCTIONS BEFORE USE: SAFETY INSTRUCTIONS

Warning: Please be alert to the risk of personal danger, injury, and property damage.

1. This appliance shall not be used by children. Keep the appliance and its accessories out of reach of children.

2. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

3. Children shall not play with the appliance.

4. Exercise extreme caution around the blades when using or cleaning the appliance; they are extremely sharp and can cause cuts.

5. Ensure that your fingers stay away from the blades while the appliance is operating.

6. Read the “Care and Cleaning” section for instructions on cleaning surfaces that come into contact with food.

7. This appliance is intended for household use only; any other (industrial or commercial) use is not permitted.

8. For safe operation, assemble and use the appliance only according to the instructions in the manual.

9. Do not use strong detergents or chemical cleaners when cleaning the appliance.

10. Do not touch moving parts while the appliance is operating. Using

accessories not recommended or supplied by the manufacturer may cause fire, electric shock, or injury.

11. Have the appliance repaired only by an authorized service center designated by the manufacturer.

12. Never expose the motor to water.

13. Be careful with fingernails, hair, and clothing when operating the appliance to prevent accidents.

14. Do not operate the blender unless all accessories are properly secured.

15. Do not open the blender lid while the appliance is running.

16. Allow the appliance to cool completely between uses. Overheated batteries may pose a safety risk.

17. Do not use the appliance if you notice any leakage.

18. Wait at least 1 minute between operating cycles.

19. Do not overfill the appliance with fruits, vegetables, or liquids to avoid overloading or damaging it.

20. Do not store prepared smoothies in the appliance. Consume immediately or transfer to another container.

21. The product is equipped with a 5V lithium battery. Under no circumstances should the product be disassembled without permission to avoid the risk of short-circuiting the circuit board and the battery, etc. Under no circumstances should the product be squeezed, punctured, or short-circuited, or immersed in water or placed in an environment with an ambient temperature above 60°C.

22. Do not under any circumstances grind any heated food in the blender at a temperature of more than 60°C.

23. Do not use or place on or near a hot gas or electric burner.

24. Do not use this appliance for other than the intended use.

25. **Do not** place oversized foods and utensils into this appliance as they may create a risk of electrical shock, or shorting of electrical circuitry.

26. **Warning:** To avoid possibility of fire, never leave the appliance unattended during use.

27. **Do not** clean with metal scouring pads.

28. **Do not** clean with abrasive or acidic cleaning substances and solutions. ACIDIC SUBSTANCES will disclosure the appliance and lead to corrosion of the blades.

CAUTIONS


There is a risk of personal injury or damage to property.

1. During the use of the product, do not separate the sections of the blender and insert your hand or other objects into the grinding cup.

2. This product is not designed for idling; the blending time is 20 seconds. After 6 cycles of continuous use, with 1 minute in between use, please pause usage for 1-2 minutes for cooling down.

3. The product is designed for use with fresh fruit mixes and is not suitable for use with meats, potatoes, nut, etc.


PARTS IDENTIFICATION

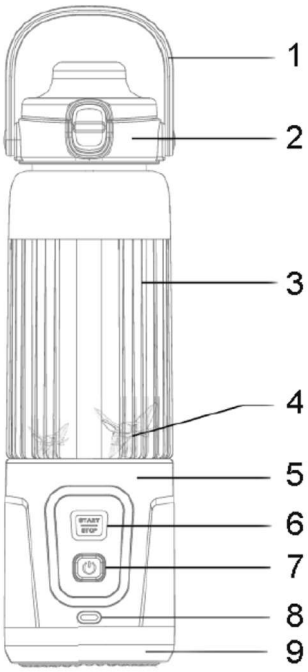



1. Handle ring
2. Lockable sport cap
3. Bottle
4. Twin blades
5. Motor unit
6. Start/Stop button
7. Power switch button
8. Charging port
9. Non-slip base
10. Type c charging cable
11. Twin blade cover
12. Bottom cover

STATUS INDICATOR LIGHT

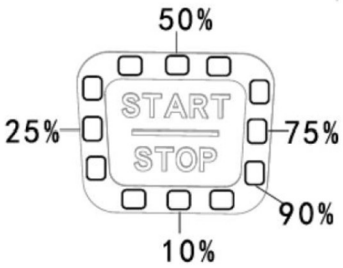

Use the charging cable to charge the product.

During charging, the red LED light illuminates sequentially clockwise, from lower to higher charge levels. When fully charged, the blue light turns on.

USING YOUR BLENDER

Instructions for using the portable blender.


1. When using this product for the first time, make sure that battery is fully charged and rinse any parts that come into direct contact with food thoroughly. Take caution and pay attention when cleaning the blades.

2. Screw the bottle onto the motor unit clockwise.

3. Place the ingredients to be blended into the bottle. Make sure that fruits or vegetables do not exceed halfway up the bottle, and that the liquid stays at least three finger-widths below the top (roughly three-quarters full).

4. Press the Power switch button to turn on the device. The blue LED will light up and start blinking, indicating the blender is ready for use.

5. Press the Start/Stop button to begin blending. The blender will run for 20 seconds, during which the blue LED rotates clockwise. After 20 seconds, the device will automatically stop.

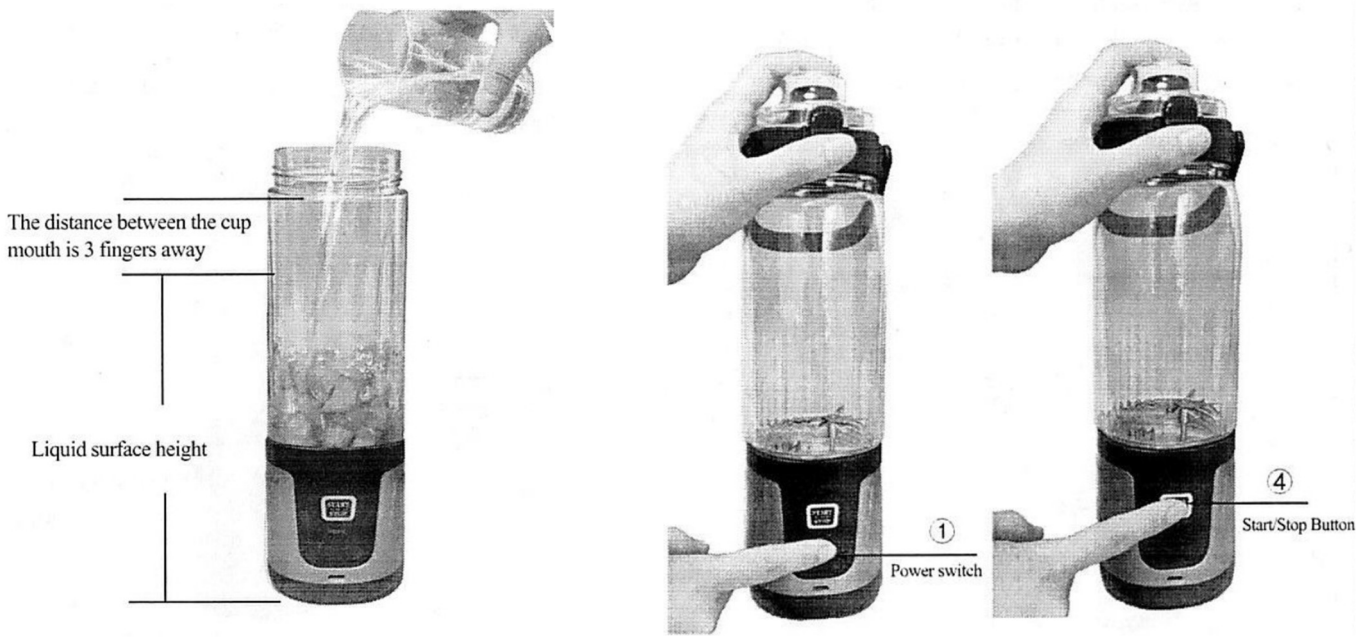

6. If the start button does not start the machine and the blue/red display is replaced, it means the safety switch is not detected in the safety protection mode. Ensure the blender bottle has been screwed onto the motor unit.

7. The red LED is on when charging, and the blue LED is on when fully charged.

SAFETY LOCKING SYSTEM

For safety, the blender is equipped with a locking system. If the bottle is not properly attached to the motor unit, the motor will not start and the red LED will blink three times.

PRACTICAL BLENDING TIPS

- A quick blend can recombine separated sauces.
- Cut ingredients into small cubes (approx. 2–3 cm) for more even blending.
- Never overfill the blender beyond the maximum level.
- Fruits and vegetables, whether raw or cooked, should be cubed before blending.
- When blending multiple ingredients, add the liquid last.
- Avoid adding too much frozen food or ice.

Do not pour hot ingredients directly into the bottle; allow them to cool first.

Note:

If you press the power switch during blending the product will stop immediately.

CLEANING & MAINTENANCE

Before cleaning the product, please unplug the USB charging cable. Clean the product promptly after use.


1. Fill the bottle halfway with lukewarm water and a small amount of dish soap.
2. Turn on the blender and run it normally.
3. Pour out the contents and rinse the bottle.
4. For thorough cleaning, wash the lid and bottle in warm, soapy water.
5. Clean the blades using a small brush. Never immerse the motor unit in water or hold it under running water!
   Do not use abrasive, sharp objects or corrosive liquid solvents (e.g., alcohol, gasoline, acetone) for cleaning.

Note: Do not place any part of the blender in a dishwasher. Do not put the product in a high temperature sterilizer.

CLEANING THE MOTOR UNIT

Wipe the motor unit with a dry, soft cloth. For stubborn dirt, use a slightly damp cloth, then immediately dry thoroughly. Be careful to ensure that no liquid enters the charging port under any circumstances.

Note: Never immerse the motor base in water.

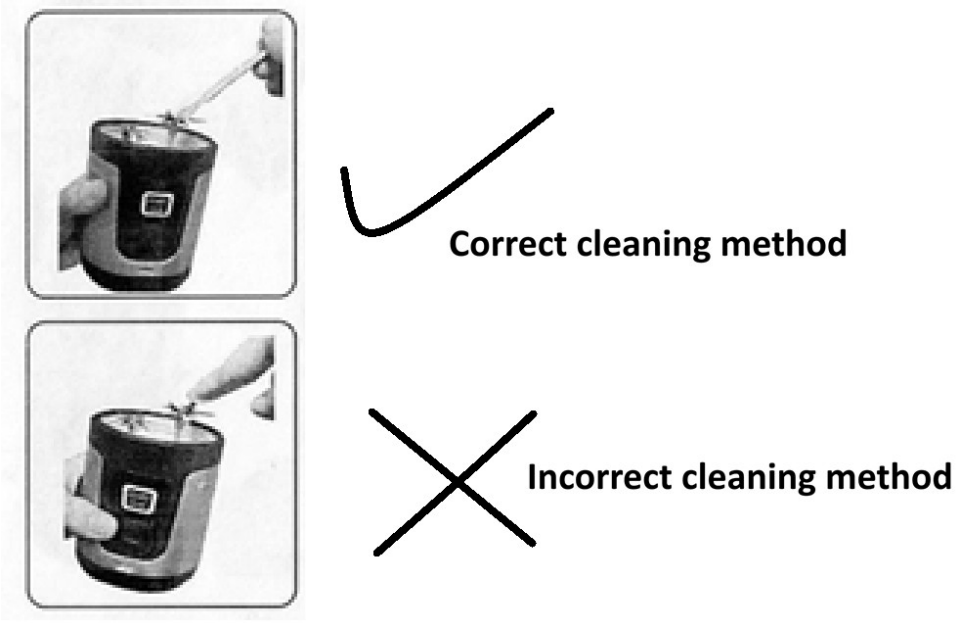

STORAGE

- Clean the device as described then let it dry thoroughly.
- We recommend storing the device in its original packaging!
- Store the appliance in a well-ventilated, dry place out of the reach of children.
- For long term storage, ensure the product is clean before storing away.
- Store in a dry and ventilated space to prevent moisture build up within the electrical components.

ENVIROMENTAL PROTECTION

Correct disposal of this product:

Your appliance has been designed to run for many years. However, when you decide to replace it, remember to think about how you can contribute to protecting the environment.



This marking indicates that your appliance should not be disposed of with other household wastes throughout the UK or the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle this appliance responsibly to promote the sustainable reuse of material resources. Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

TECHNICAL SPECIFICATION

Max. capacity	750 ml
Rated voltage	DC 7.4V
Rated power	180 W
Protection class (against electric shock)	Class III.
Blade material	SUS 304
Bottle material	PCTG
Rotation speed	15000 rpm
Battery capacity	2000 mAh * 2pcs
Charging	5V / 2A; 2-3 hours
Charging port	Type-C
Operating time	20 sec. per use
Safety switch	Mechanical trigger switch
Dimension	88 x 88 x 300 mm

FAULT RESOLUTION

Possible Problem	Solution
When the power is turned on, the blue LED does not light up and cannot be turned on?	The power switch is not turned on, and the bottle is not tightly screwed onto the motor unit. Turn the bottle till it is screwed on tightly onto the motor unit and press the power switch.
When the machine is turned on, the red LED lights up and cannot be turned on?	The battery charge is too low, charge it.
The red LED flashes after startup and stops?	The volume of food to be blended is too low or too much, increase or reduce the volume.
The red/blue LED flashes when charging?	The battery pack is faulty, replace or repair the battery pack.
After starting, the red LED flashes for 5 seconds	There is an object stuck in the blades or the blade is stuck, or the blender is too full and over the loading capacity – therefore the loading protection mode is activated.
Blender bottle leakage?	The silicone ring is not properly installed or has foreign matter in it, clean the silicone ring and reinstall the silicone ring.
When charging the LED red and blue alternatively lights up	Occurs to protect the battery temperature from being too high.

TERMS & CONDITIONS

BridgePro Management Ltd ("BPM").

Limited Warranty: This product is guaranteed for 12 months from the date of original purchase. This guarantee is valid in the UK only.
If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase or a receipt.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse, or consumable parts.
- The product has limited liability for incidental or consequential loss or damage.

To validate your warranty, please visit www.bgepro.com/support/warranty/ and register with us online. Warranty is only valid with proof of purchase or receipt.

This product warranty is available to consumers only.
You are a consumer if you purchased the product at retail for personal, family, or household use. Except as otherwise stated under applicable law, this warranty is not available to retailers or other commercial purchasers and owners.
This product warranty is void if the product is used for situations other than a single-family household use or subjected to any voltage and wave forms other than as specified in this instruction manual (e.g. 220V-50Hz).

Transportation charges: Transportation charges for products under this warranty, subject to repair or replacement, shall be borne by the purchaser.

Conditions: Service centers or retail stores do not have the right to alter, modify, or in any way change the terms and conditions of this warranty.
Warranty registration is not necessary but is encouraged to validate product warranty.

About your warranty: Most warranty repairs or replacements are handled routinely but sometimes requests for warranty services may not be appropriate, e.g. warranty services would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, 3rd party warehousing, or improper installation. Similarly, warranty is void if the serial number on the product has been removed or the product has been altered or modified.

Normal wear: This warranty does not cover normal wear of any parts or damage resulting from any of the following negligent use or misuse of the product:

- Improper voltage or current,
- Use contrary to the operation instructions,
- Deviation from the instructions regarding storage and transportation, or
- Repair or alteration by any 3rd party.

This warranty does not cover Acts of God such as fire, flood, hurricanes, and tornados.
BPM shall not be liable for any incidental or consequential damages by the breach of any express or implied warranty.
Except to the extent prohibited by applicable law any implied warranty of merchantability or fitness for the particular purpose is limited in duration of this warranty.

DECLARATION OF CONFORMITY

Manf: BRIDGEPRO MANAGEMENT LTD, 167–169 Great Portland Street, London, W1W 5PF

EU Rep: Authorised Rep Compliance Ltd., Ground Floor, 71 Lower Baggot Street, Dublin, D02 P593, Ireland. www.arccompliance.com

This declaration of conformity is issued under the sole responsibility of the manufacturer BridgePro Management Ltd.

Product Name	Product Type	Product Part Number
BridgePro PORTABLE SMOOTHIE MAKER	Smoothie Maker	543321 (MDL-27; PBL-28BW)

Note: Serial number is stated on each product rating label.

The object of the declaration as described above is in conformity with the relevant Union harmonisation legislation:


Legislation	Title
2006/42/EC	Machinery Directive
2014/35/EU	Low Voltage Directive (LVD)
2014/30/EU	EMC Directive
2011/65/EU	RoHs Directive

For the evaluation of compliance, the following standards have been applied:

LVD	EN 60335-1:2012+A11:2014+A13: 2017+A1:2019+A14:2019+A2:2019+A15: 2021+A16:2023 EN 62233:2008 IEC 60335-1:2010+A1:2013+A2:2016 IEC 60335-2-14: 2016+A1:2019	RoHs	ROHS Directive (EU) 2015/863 2011/65/EU
Low Power Consumption	EN 50564:2011		

I hereby declare that the equipment named above has been designed to comply with the relevant sections of the above referenced standards. The unit complies with all relevant essential requirements of the Union harmonisation legislation.

Signed for an on behalf of BridgePro Management Ltd.

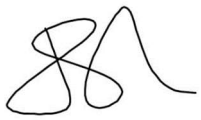

Director

London, England, 15/05/2025

NOTES