BRIDGE PRO

800ml

TUMBLENDER

Wireless On-The-Go Portable Blender with Insulated Cup



543323

7.4V DC, 150W

When using electric appliances basic safety precaution should always be followed. Do not use BridgePro Portable Smoothie Maker until you have read this manual thoroughly. Please keep this instruction manual in a safe place.

Visit BridgePro Online Store **www.bgepro.com/shop/**

UK CA CE

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS 3
PARTS IDENTIFICATION 6
USING YOUR BLENDER 7
CLEANING & MAINTENANCE 11
TROUBLE SHOOTING 13
TECHNICAL SPECIFICATION 14
TERMS & CONDITIONS 15
DECLARATION OF CONFORMITY 16
NOTES 17

IMPORTANT SAFEGUARDS

Please read these instructions carefully before use!

This product is intended for use at home or in similar locations only.

READ ALL INSTRUCTIONS BEFORE USE: SAFETY INSTRUCTIONS

Warning: Please be alert to the risk of personal danger, injury, and property damage.

1. This appliance shall not be used by children. Keep the appliance and its accessories out of reach of children.

2. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

3. Children shall not play with the appliance.

4. Exercise extreme caution around the blades when using or cleaning the appliance; they are extremely sharp and can cause cuts.

5. Ensure that your fingers stay away from the blades while the appliance is operating.

6. Read the “Care and Cleaning” section for instructions on cleaning surfaces that come into contact with food.

7. This appliance is intended for household use only; any other (industrial or commercial) use is not permitted.

8. For safe operation, assemble and use the appliance only according to the instructions in the manual.

9. Do not use strong detergents or chemical cleaners when cleaning the appliance.

10. Do not touch moving parts while the appliance is operating. Using

accessories not recommended or supplied by the manufacturer may cause fire, electric shock, or injury.

11. Have the appliance repaired only by an authorized service center designated by the manufacturer.

12. Never expose the motor to water.

13. Be careful with fingernails, hair, and clothing when operating the appliance to prevent accidents.

14. Do not operate the blender unless all accessories are properly secured.

15. Do not open the blender lid while the appliance is running.

16. Allow the appliance to cool completely between uses. Overheated batteries may pose a safety risk.

17. Do not use the appliance if you notice any leakage.

18. Wait at least 1 minute between operating cycles.

19. Do not overfill the appliance with fruits, vegetables, or liquids to avoid overloading or damaging it.

20. Do not store prepared smoothies in the appliance. Consume immediately or transfer to another container.

21. The product is equipped with a 5V lithium battery. Under no circumstances should the product be disassembled without permission to avoid the risk of short-circuiting the circuit board and the battery, etc. Under no circumstances should the product be squeezed, punctured, or short-circuited, or immersed in water or placed in an environment with an ambient temperature above 60°C.

22. Do not under any circumstances grind any heated food in the blender at a temperature of more than 60°C.

23. Do not use or place on or near a hot gas or electric burner.

24. Do not use this appliance for other than the intended use.

25. **Do not** place oversized foods and utensils into this appliance as they may create a risk of electrical shock, or shorting of electrical circuitry.

26. **Warning:** To avoid possibility of fire, never leave the appliance unattended during use.

27. **Do not** clean with metal scouring pads.

28. **Do not** clean with abrasive or acidic cleaning substances and solutions. ACIDIC SUBSTANCES will disclosure the appliance and lead to corrosion of the blades.

CAUTIONS

There is a risk of personal injury or damage to property.

1. During the use of the product, do not separate the sections of the blender and insert your hand or other objects into the grinding cup.

2. This product is not designed for idling; the blending time is 20 seconds. After 6 cycles of continuous use, with 1 minute in between use, please pause usage for 1-2 minutes for cooling down.

3. The product is designed for use with fresh fruit mixes and is not suitable for use with meats, potatoes, nut, etc.

4. The lid and base of the juicer are not properly tightened and assembled. Do not turn on the power.

5. It is also strictly prohibited to wash the switch panel or the base in water.

6. The battery may catch fire or explode when exposed to high heat.

7. If you discover any water leakage, please do not use the device anymore.

PARTS IDENTIFICATION

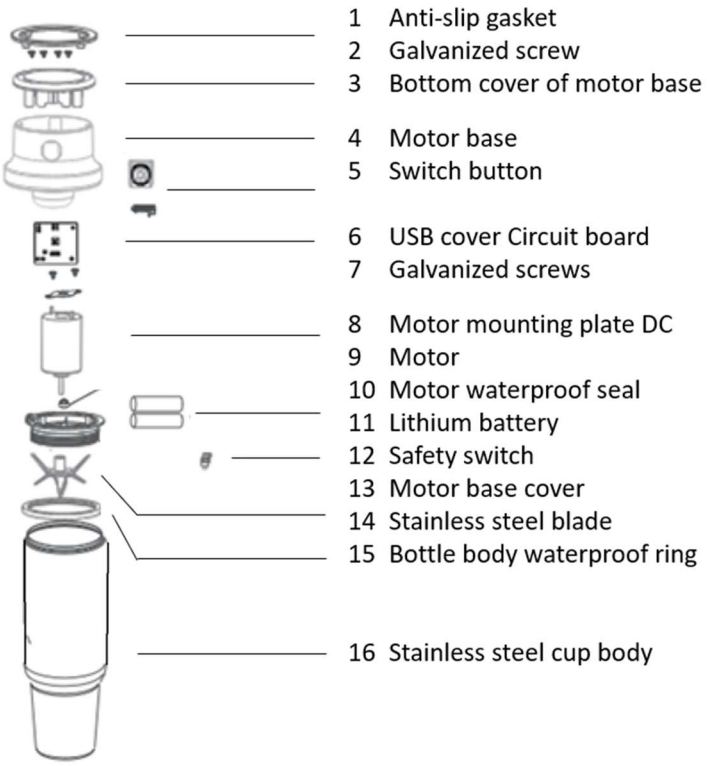

1 Anti-slip gasket
2 Galvanized screw
3 Bottom cover of motor base
4 Motor base
5 Switch button
6 USB cover Circuit board
7 Galvanized screws
8 Motor mounting plate DC
9 Motor
10 Motor waterproof seal
11 Lithium battery
12 Safety switch
13 Motor base cover
14 Stainless steel blade
15 Bottle body waterproof ring
16 Stainless steel cup body



- Juicer
- Instruction manual
- Replaceable lid
- Type charging cable

Package Content

USING YOUR BLENDER

Instructions for using the portable blender.

CHARGING METHOD

The juicer must be charged for more than four hours before the first use.
Connect the charging cable provided with the juicer as shown in the picture.
Picture 1.



When using this product for the first time, make sure that battery is fully charged and rinse any parts that come into direct contact with food thoroughly. Take caution and pay attention when cleaning the blades.

PREPARATIONS BEFORE TURNING ON THE DEVICE:

1. Clockwise direction: The cup base rotates to the bottom See picture 2

2. Tighten the base cup: The blue light flashes and the juicer can be turned on.



Picture 2

HOW TO USE

1. Cut fruits, vegetables, food to be blended into small cubes - approx. 2–3 cm in size.

2. Put the cut food into the juicer cup body.

3. Add an appropriate amount of water or milk, and keep the liquid level within the proper range.



Picture 3

PRACTICAL BLENDING TIPS

- A quick blend can recombine separated sauces.
- Cut ingredients into small cubes for more even blending.
- Never overfill the blender beyond the maximum level.
- Fruits and vegetables, whether raw or cooked, should be cubed before blending.
- When blending multiple ingredients, add the liquid last.
- Avoid adding too much frozen food or ice.

Do not pour hot ingredients directly into the bottle; allow them to cool first.

Note:

If you press the power switch during blending the product will stop immediately.

4. Rotate the cup body cover clockwise and then close it. As shown in photo 8, click to turn on the juicer – using the power button. After 20 seconds, the machine will automatically stop. The freshly made juice can be consumed immediately.



Picture 4

5. After powering on, place the juicer device upside down, or refer to Picture 5.



Picture 5

WORKING PATTERN

1. Click the power button once to turn on the juicer, and click again to turn it off.

2. After the main unit is tightened with the cup body, the blue light flashes rapidly 3 times, indicating it can be powered on normally.

3. When the juicer is turned on, the green light comes on. It operates for 20 seconds and then automatically shuts down.

4. If the juicer fails to start after the power on button is selected and the red and blue lights to flash alternately, it can indicate the safety switch was not activated in the device.

5. If the juicer fails to start after the power on button is selected and the red light flashes, it indicates the device voltage is too low and the device has entered the protection mode.

6. After turning on the juicer, if the red light flashes for 5 seconds, this indicates that there is an object stuck or the blade is jammed, or has entered the overload protection mode. Shaking the cup body gently can release stuck object.

7. When charging the red light is displayed. Once fully charged the blue light will appear.

8. If the red and blue lights alternate and flash during charging, it means the battery pack is in a fault protection mode.

SAFETY LOCKING SYSTEM

For safety, the blender is equipped with a locking system. If the bottle is not properly attached to the motor unit, the motor will not start.

CLEANING & MAINTENANCE

1. Before cleaning, make sure the juicing cup body has stopped running and the blades have stopped rotating. Unplug the USB charging cable. Clean the product promptly after use.

2. The main unit can be wiped clean with a dry or wet cloth. Do not immerse it in water or other liquids. Do not use sharp objects or corrosive liquid solvents (such as alcohol, gasoline, acetone) to clean this product.

3. The correct way to clean the blades is to hold a small brush with a handle by hand. See Picture 6.



Picture 6

4. Do not clean the blades with your fingers. See Picture 7. Do not use abrasive, sharp objects or corrosive liquid solvents (e.g., alcohol, gasoline, acetone) for cleaning.



Picture 7

Note: Do not place any part of the blender in a dishwasher. Do not put the product in a high temperature sterilizer.

CLEANING THE MOTOR UNIT

Wipe the motor unit with a dry, soft cloth. For stubborn dirt, use a slightly damp cloth, then immediately dry thoroughly. Be careful to ensure that no liquid enters the charging port under any circumstances.

Note: Never immerse the motor base in water.

STORAGE

- Clean the device as described then let it dry thoroughly.
- We recommend storing the device in its original packaging!
- Store the appliance in a well-ventilated, dry place out of the reach of children.
- For long term storage, ensure the product is clean before storing away.
- Store in a dry and ventilated space to prevent moisture build up within the electrical components.

ENVIROMENTAL PROTECTION

Correct disposal of this product:

Your appliance has been designed to run for many years. However, when you decide to replace it, remember to think about how you can contribute to protecting the environment.



This marking indicates that your appliance should not be disposed of with other household wastes throughout the UK or the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle this appliance responsibly to promote the sustainable reuse of material resources. Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.

TROUBLE SHOOTING

Problem	Solution
The red light is on at startup but the juicer still won't turn on?	The juice cup body is not properly rotated into place. Please tighten the cup body and the blue light will be displayed.
The red light is on at startup but the device still won't turn on?	It's because the battery voltage is too low. Please charge it promptly.
The device stops after 5 seconds of startup?	Add fruits, vegetables, and an appropriate amount of water or milk to maintain the normal liquid level.
The red light is flashing for 5 seconds after startup?	Open the cup body and remove any hard objects stuck on the blade. Or... The loading amount has exceeded the safety limit. Just pour out a little of the contents in the cup.
The red/green lights alternate flashing during charging?	If so, the battery pack is faulty. It should be replaced or sent back to the factory for repair.
Water leakage?	The silicone ring has foreign objects or is not properly assembled. Please clean the silicone ring or Just reassemble the silicone ring

TECHNICAL SPECIFICATION

PRODUCT SPECIFICATION	
Max. capacity	800 ml
Rated voltage	DC 7.4V
Rated power	150 W
Protection class (against electric shock)	Class III.
Blade material	SUS 304
Rotation speed	17000 rpm ±10%
Battery capacity	1500 mAh
Charging	5V / 1A; 2-3 hours
Charging port	Type-C
Working Current	Maximum 22A
Operating time	20 sec. per use
Safety switch	Mechanical trigger switch
Dimension	99 x 242 / 292 mm
Weight	<0.85kg

TERMS & CONDITIONS

BridgePro Management Ltd ("BPM").

Limited Warranty: This product is guaranteed for 12 months from the date of original purchase. This guarantee is valid in the UK only.
If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase or a receipt.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse, or consumable parts.
- The product has limited liability for incidental or consequential loss or damage.

To validate your warranty, please visit www.bgepro.com/support/warranty/ and register with us online. Warranty is only valid with proof of purchase or receipt.

This product warranty is available to consumers only.
You are a consumer if you purchased the product at retail for personal, family, or household use. Except as otherwise stated under applicable law, this warranty is not available to retailers or other commercial purchasers and owners.
This product warranty is void if the product is used for situations other than a single-family household use or subjected to any voltage and wave forms other than as specified in this instruction manual (e.g. 220V-50Hz).

Transportation charges: Transportation charges for products under this warranty, subject to repair or replacement, shall be borne by the purchaser.

Conditions: Service centers or retail stores do not have the right to alter, modify, or in any way change the terms and conditions of this warranty.
Warranty registration is not necessary but is encouraged to validate product warranty.

About your warranty: Most warranty repairs or replacements are handled routinely but sometimes requests for warranty services may not be appropriate, e.g. warranty services would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, 3rd party warehousing, or improper installation. Similarly, warranty is void if the serial number on the product has been removed or the product has been altered or modified.

Normal wear: This warranty does not cover normal wear of any parts or damage resulting from any of the following negligent use or misuse of the product:

- Improper voltage or current,
- Use contrary to the operation instructions,
- Deviation from the instructions regarding storage and transportation, or
- Repair or alteration by any 3rd party.

This warranty does not cover Acts of God such as fire, flood, hurricanes, and tornados.
BPM shall not be liable for any incidental or consequential damages by the breach of any express or implied warranty.
Except to the extent prohibited by applicable law any implied warranty of merchantability or fitness for the particular purpose is limited in duration of this warranty.

DECLARATION OF CONFORMITY

Manf: BRIDGEPRO MANAGEMENT LTD, 167–169 Great Portland Street, London, W1W 5PF

EU Rep: Authorised Rep Compliance Ltd., Ground Floor, 71 Lower Baggot Street, Dublin, D02 P593, Ireland. www.arccompliance.com

This declaration of conformity is issued under the sole responsibility of the manufacturer BridgePro Management Ltd.

Product Name	Product Type	Product Part Number
BridgePro TUMBLENDER Portable Blender with Insulated Cup	Smoothie Maker	543323 (MDL-32B)

Note: Serial number is stated on each product rating label.

The object of the declaration as described above is in conformity with the relevant Union harmonisation legislation:

Legislation	Title
2006/42/EC	Machinery Directive
2014/35/EU	Low Voltage Directive (LVD)
2014/30/EU	EMC Directive
2011/65/EU	RoHs Directive

For the evaluation of compliance, the following standards have been applied:

LVD	EN 60335-1:2012+A11:2014+A13:2017+A1:2019+A14:2019+A2:2019+A15:2021+A16:2023 EN 62233:2008 IEC 60335-1:2010+A1:2013+A2:2016 IEC 60335-2-14: 2016+A1:2019	RoHs	ROHS Directive (EU) 2015/863 2011/65/EU
Low Power Consumption	EN 50564:2011		

I hereby declare that the equipment named above has been designed to comply with the relevant sections of the above referenced standards. The unit complies with all relevant essential requirements of the Union harmonisation legislation.

Signed for an on behalf of BridgePro Management Ltd.



Director

London, England, 15/05/2025

NOTES